


Tech Tip

Different computers may require the RoadRunner's "Minibank" player to be in different display modes in order to display the video properly. If the video looks like the image below, follow these steps to change the display mode of the video clip so that it will playback correctly on your computer:

1. With the Player open, select the **SHIFT** key on your computer
2. While holding the **SHIFT** key, double click the Player icon in the upper left hand corner.

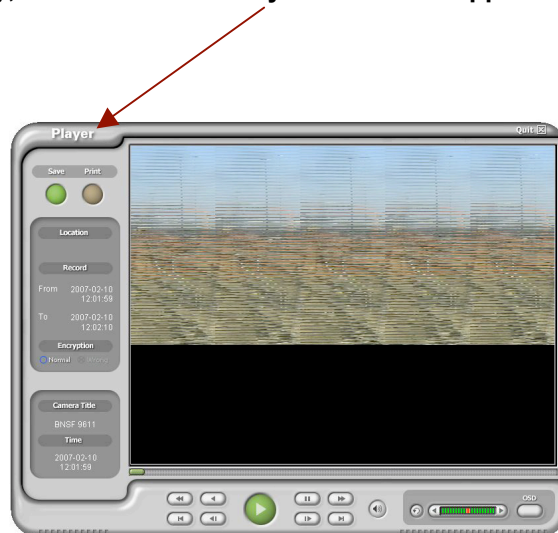

3. If the video is still garbled, repeat this step to change the display mode again, until the video plays clearly.

For further assistance, please contact Technical Support at: 800.641.1401 or/ email: tech@avt-usa.com



1331-118th Ave SE, Ste 300 – Bellevue, WA 98005
Tel: 425.453.0430 / Fax: 425.453.0959
www.avt-usa.com